




Payphone.com  
 16840 Clay Rd. #118  
 Houston, TX 77084  
 1-800-884-4835

## Programming The Hot Dialer (DTMF)

 <b>Default Program Password</b>	#0* (This can be changed via register 00)		
 <b>Programming Prompts (beeps)</b>	1 beep = register valid continue entry.	2 beeps = dialer accepted program entry.	4 beeps = error in programming.
 <b>Remote Programming the LX350</b>	Remote programming can be done by having the user of the dialer call you on the telephone line the dialer is connected to or you can call them. When the call is completed you will enter the programming password and begin programming. If you accidentally enter the program password incorrectly you can wait 7 seconds and enter the password again.		

REGISTER 00	PROGRAM ACCESS CODE			
<b>Default = #0*</b>	1 = 1	5 = 5	9 = 9	#2 = A
<b>Max Entry = 10</b>	2 = 2	6 = 6	0 = 0	#3 = B
	3 = 3	7 = 7	* = *	#4 = C
	4 = 4	8 = 8	#1 = #	#5 = D
	<b>**Important Note**</b> This program register must be sealed with a ##			
<b>Example</b>	00 123 ## This sets the program access code to 123			
<b>Description</b>	This allows the user to change the default program access code			
<b>User Notes</b>				

REGISTER 01	HOTLINE NUMBER			
<b>Default = Empty</b>	1 = 1	5 = 5	9 = 9	#2 = Pause 1 second
<b>Max Entry = 46</b>	2 = 2	6 = 6	0 = 0	#3 = Pause 5 seconds
	3 = 3	7 = 7	* = *	#4 = Pause 10 Seconds
	4 = 4	8 = 8	#1 = #	#5 = D
	<b>**Important Note**</b> This program register must be sealed with a ##			
<b>Example</b>	01 12083671399 ## This sets the hotline number to 12083671399.			
<b>Description</b>				
<b>User Notes</b>				

REGISTER 02	HOTLINE DIAL DTMF TRIGGER DIGITS			
<b>Default = *</b>	1 = 1	5 = 5	9 = 9	#2 = A
<b>Max Entry = 9</b>	2 = 2	6 = 6	0 = 0	#3 = B
	3 = 3	7 = 7	* = *	#4 = C
	4 = 4	8 = 8	#1 = #	#5 = D
	<b>**Important Note**</b> This program register must be sealed with a ##			
<b>Example</b>	02 * ## This sets the hotline trigger to *.			
<b>Description</b>	The user can program a dtmf digit or digits to activate the hotline dial feature.			
<b>User Notes</b>				

REGISTER 03	OFF HOOK HOTLINE DIAL ENABLE
<b>Default = 2</b>	
	1 = Enable off hook hotline dial 2 = Disable off hook hotline dial
<b>Example</b>	03 1 This enables the off hook hotline dial feature.
<b>Description</b>	This allows the user to activate or deactivate the off hook hotline dial feature.
<b>User Notes</b>	

REGISTER 04	DTMF TRIGGER HOTLINE FEATURE
<b>Default = 2</b>	
	1 = Enable dtmf trigger 2 = Disable dtmf trigger
<b>Example</b>	04 1 This enables the hotline dtmf trigger feature
<b>Description</b>	This allows the user to activate or deactivate the dtmf trigger feature.
<b>User Notes</b>	

REGISTER 05		ON HOOK TIMING			
<b>Default = 6</b>	1 = 200ms	5 = 1.0 second	9 = 1.8 seconds	A = 2.6 seconds	
	2 = 400ms	6 = 1.2 seconds	0 = 2.0 seconds	B = 2.8 seconds	
	3 = 600ms	7 = 1.4 seconds	* = 2.2 seconds	C = 3.0 seconds	
	4 = 800ms	8 = 1.6 seconds	# = 2.4 seconds	D = 3.2 seconds	
<b>Example</b>	05 7 This sets on hook timing to 1.4 seconds.				
<b>Description</b>	On hook timing allows the user to select the amount of time for a valid on hook condition after the user returns the phone to an on hook position (hangs up the phone).				
<b>User Notes</b>					

REGISTER 06		DTMF INTERVAL			
<b>Default = 5</b>	1 = 40ms	5 = 80ms	9 = 120ms	A = 160ms	
	2 = 50ms	6 = 90ms	0 = 130ms	B = 170ms	
	3 = 60ms	7 = 100ms	* = 140ms	C = 180ms	
	4 = 70ms	8 = 110ms	# = 150ms	D = 190ms	
<b>Example</b>	06 7 This sets the dtmf dial interval to 100ms.				
<b>Description</b>	Dtmf interval is the rate the dialer out pulses dtmf tones to the local office exchange or other chosen network or carrier.				
<b>User Notes</b>					

REGISTER 07		CALL RESTRICT MODE ENABLE
<b>Default = 2</b>	1 = Enable call restrict mode 2 = Disable call restrict mode	
<b>Example</b>	07 1 This enables the call restrict mode	
<b>Description</b>	This should be enabled if you do not want outgoing calls to be placed from the line that the LX350 is connected to.	
<b>User Notes</b>		

REGISTER 96	SET TO FACTORY DEFAULTS
	1 = Default dialer 2 = Exit no default
<b>Example</b>	96 1 Defaults dialer database
<b>Description</b>	This defaults the dialer back to factory settings.
<b>User Notes</b>	

REGISTER **	EXIT PROGRAM MODE
	1 = Exit program mode and drop line
<b>Example</b>	** 1 Exits program mode.
<b>Description</b>	This exits program mode
<b>User Notes</b>	